


# CONFIGURAZIONE MODULI NT FIT 3Z / MODULE CONFIGURATION NT 3Z

Service Note


SN2400003

# elica

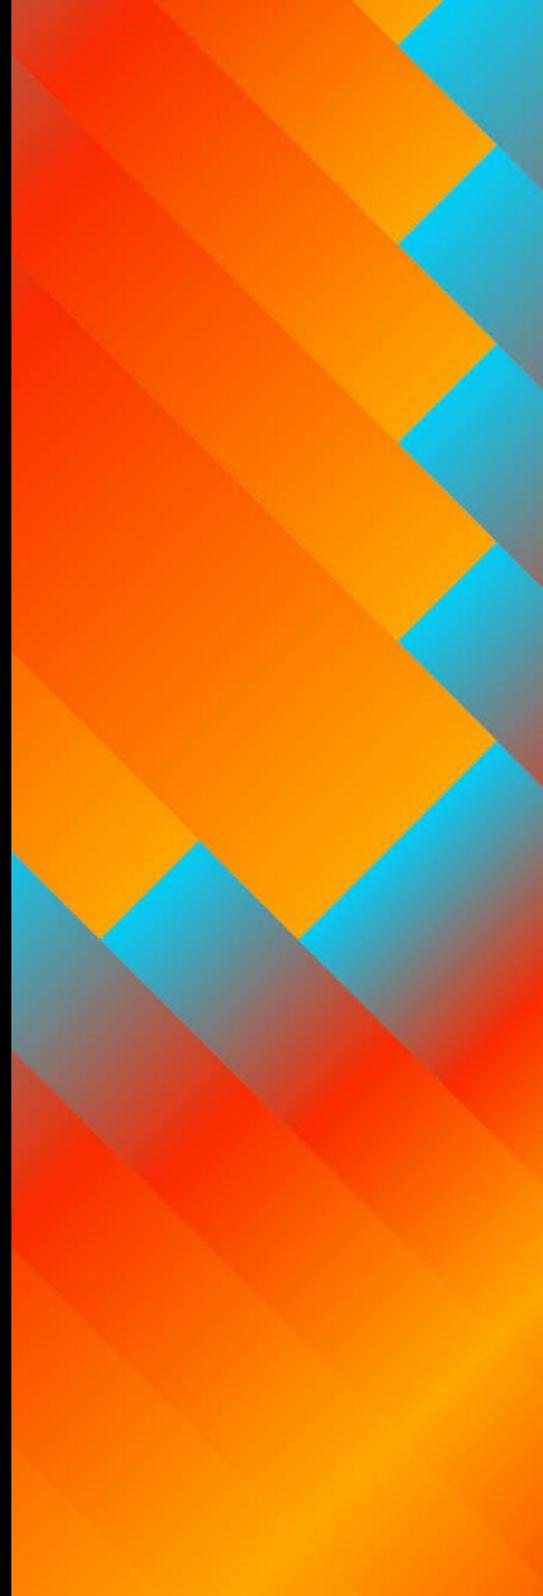


- premere (A) (che sarà lampeggiante, soltanto per i primi 2 minuti dall'alimentazione del prodotto)

- mantenendo premuto (A), premere una alla volta, in sequenza, FR-2 poi RR-2 ed infine CL-2 delle zone cottura Display (2), come indicato nella figura sotto, ad ogni pressione verrà emesso un breve segnale acustico, una volta terminata questa sequenza sarà possibile rilasciare i tasti.

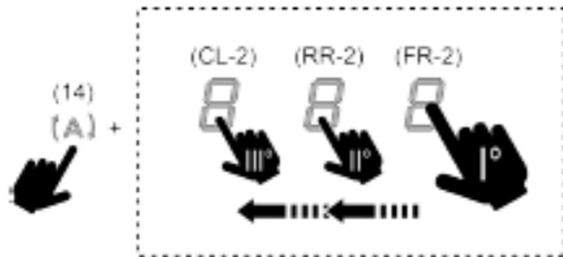


A questo punto il Display (RR-2) mostrerà in sequenza alternata i simboli e ad indicare che è possibile eseguire il settaggio.


impostare il nuovo settaggio. Per salvare la scelta effettuata premere il tasto ON/OFF (1), per 2 secondi; verrà emesso un segnale acustico prolungato a confermare l'avvenuto settaggio.

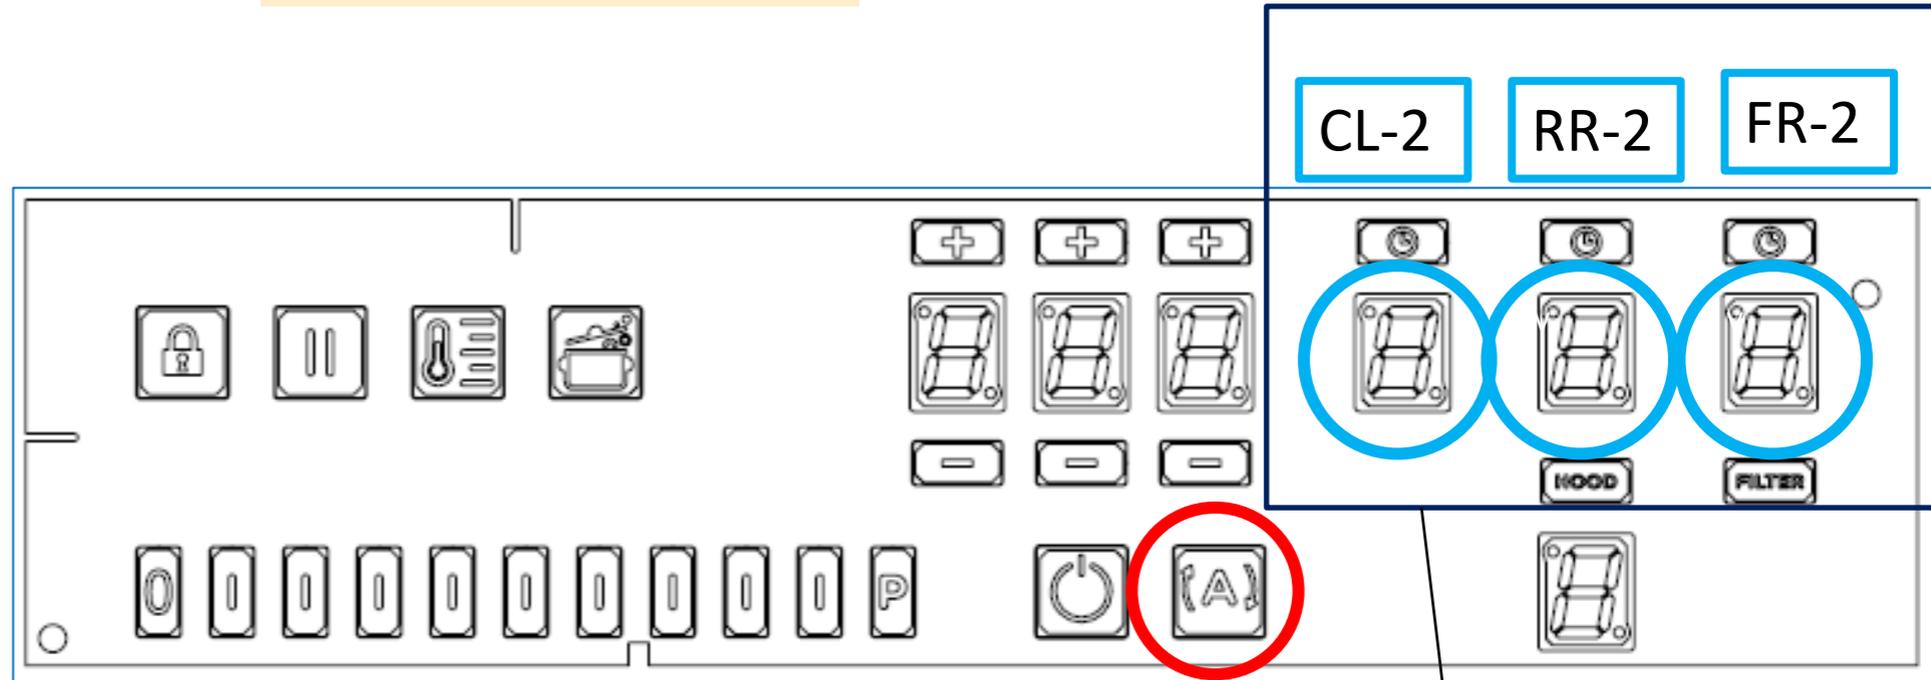


**TENERE PREMUTO**

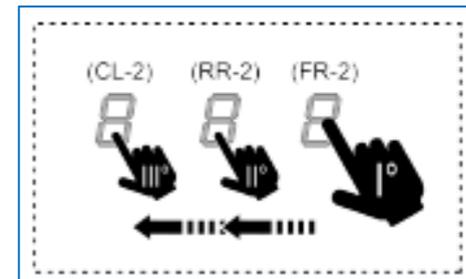


- Press (A) which will only be flashing for the first 2 minutes after the product has been powered up).
- While holding down (A) press one at a time, in sequence, FR-2, RR-2 and finally CL-2 in the cooking zone display, as shown in the figure below. A short acoustic signal will be emitted with each press; once the sequence is complete, the buttons can be released.

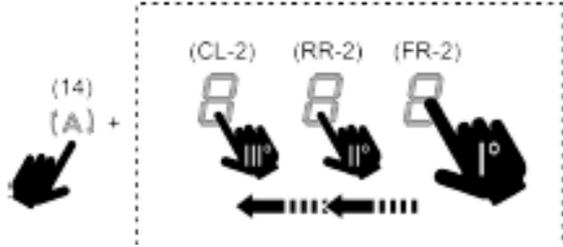

-At this point the RR-2 display will show in sequence the symbols C and 0 indicating that the setting can be carried out. Set the new setting. To save your choice, press the ON/OFF key for 2 seconds; a long beep will sound to confirm the setting.

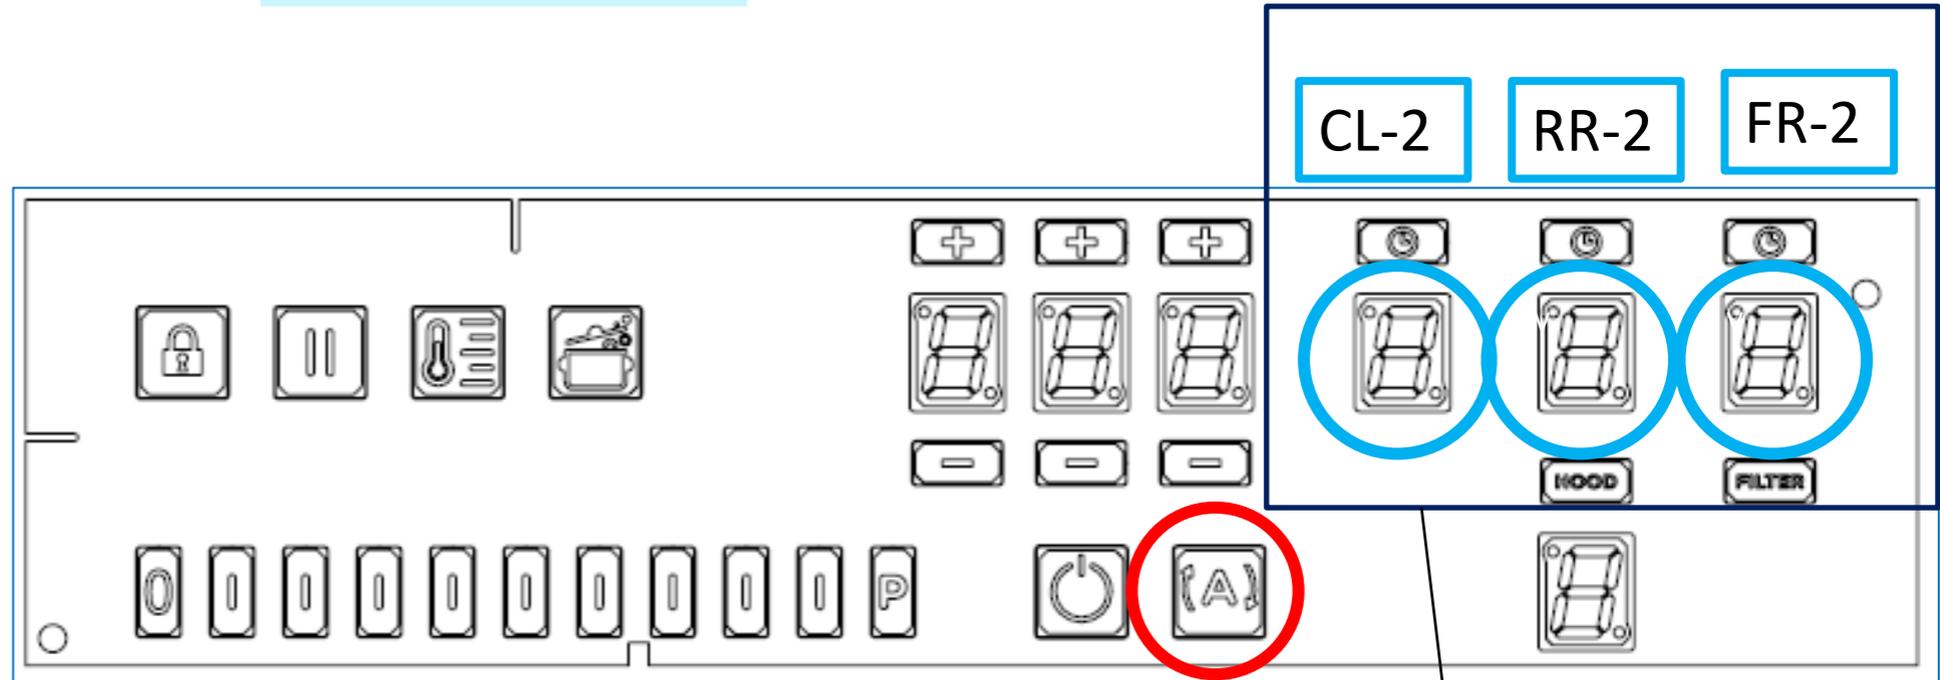

**CONTINUOUS CLICK**

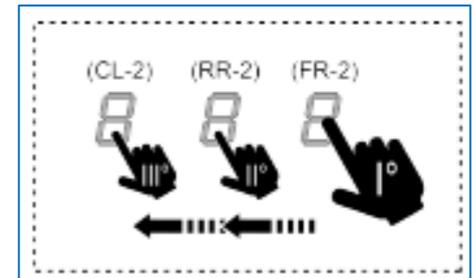

**elica**

